



Photoelectric Sensor

V3, V4 SERIES

DC Type

•V4T/V3T-7000

•V4R/V3R-1200

•V4D/V3D-200

INSTRUCTION MANUAL

- Confirm if the item meets your needs.
- Before the use, you should first thoroughly read this manual and operate correctly as mentioned.
- You should keep this manual at hand for proper use.

SPECIFICATIONS


Item	Through Beam			AC/DC type			Diffused Reflection		
	Terminal Chamber	Cable	M12 Connector	Terminal Chamber	Cable	M12 Connector	Terminal Chamber	Cable	M12 Connector
Connection	V4T-7000N,P	V3T-7000N,P	V3T-7000CN,CP	V4R-1200N,P	V3R-1200N,P	V3R-1200CN,CP	V4D-200N,P	V3D-200N,P	V3D-200CN,CP
Supply Voltage	DC10~30V Including ripple (P-P) 10%								
Current Consumption	35mA max.								
Light Source	Red LED (635nm)								
Detecting Distance	70m			12m / Reflector V-61			2m		
Hysteresis	-			-			20% max		
Sensitivity Adjustment	One turn volume								
Response Time	0.5ms max.								
Indicator	Output indicator (orange LED) / Stable indicator (green LED)								
Operating Mode	Light ON/Dark ON selectable by Volume								
Control Output	NPN/PNP open collector DC30V, 100mA max. (Residual voltage 1.8V max.)								
Environmental Illuminance	Sun Light 10,000lx Indoor Light 3,000lx			-			-		
Ambient Temperature	-25~55°C								
Ambient Humidity	35~85%/RH								
Storage Temp./Humidity	-40~70°C/35~95% RH								
Insulation Resistance	Min.20MΩ / DC500V								
Vibration Resistance	10~55Hz amplitude 1.5mm X, Y, Z each 2h								
Shock Resistance	500m/s ² X, Y, Z each 3times								
Protection Category	IEC 144 IP67								

OTHER PRECAUTIONS

- Be careful not to install the sensor at the following locations, as it may otherwise malfunction.
 - Where a lot of dust, vapor, or the like is present.
 - Where corrosive gas is produced.
 - Where water, oil or the like files directly onto the sensor.
 - Where strong vibration or shock is caused to the sensor.
- Do not use organic solvent, such as thinner, to remove contaminants from the body case, lid, and lens which are all of plastics. Using a dry rag, just wipe clean.
- When a switching regulator is to be used with a power supply, be sure to ground the Frame Ground Terminal.
- Do not use the sensor in a transient state at power on. (about 100ms)
- Do not run sensor cable near a high-voltage lines, or power lines or put them together in the same raceway. This warning should be strictly observed to prevent malfunctions caused by inductive interference.


⚠ Must not use this item as safety equipment for the purpose of human body protection.

HOW TO USE

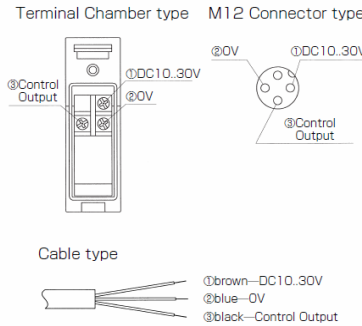


Connection

- Install the cables to match the connection terminal No. as shown below.
- Use either lead-in opening A or B according to the installation method involved.
- Install a cover (bolt) the lead-in opening not to be used.
- The figure below shows how the cables are installed when lead-in opening A is used.
- ※1 Cable packing is selected separately either for cable cover (bolt) according to cable diameter.
- Large 4 - 6 Small 6 - 8

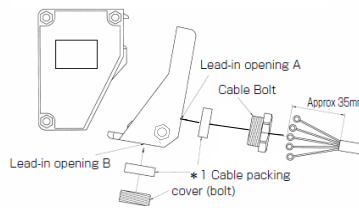

 
○ Dimensions of applicable solderless terminals




- Use solderless terminals with insulating tube.
- Use 4 to 8 mm diameter cables circular in section to maintain watertightness.
- Wrong wiring may be a cause of burned or damaged sensor. Pay due attention to wiring.
- Be careful not to install the cable near power lines, for otherwise the sensor may malfunction.
- Using the mounting accessories supplied, the sensor can be installed on either floor or wall.

INPUT AND OUTPUT CIRCUIT DIAGRAMS


NPN type

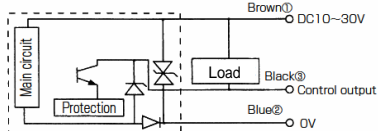


Through beam emitter

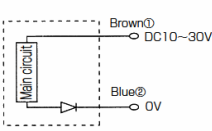


PNP type

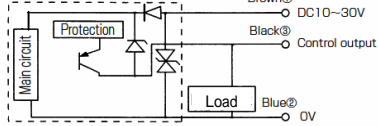


DIMENSIONS (Unit: mm)

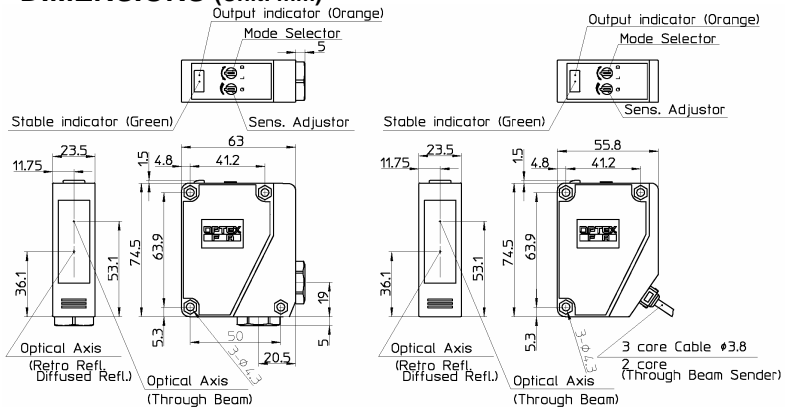

Floor Installation

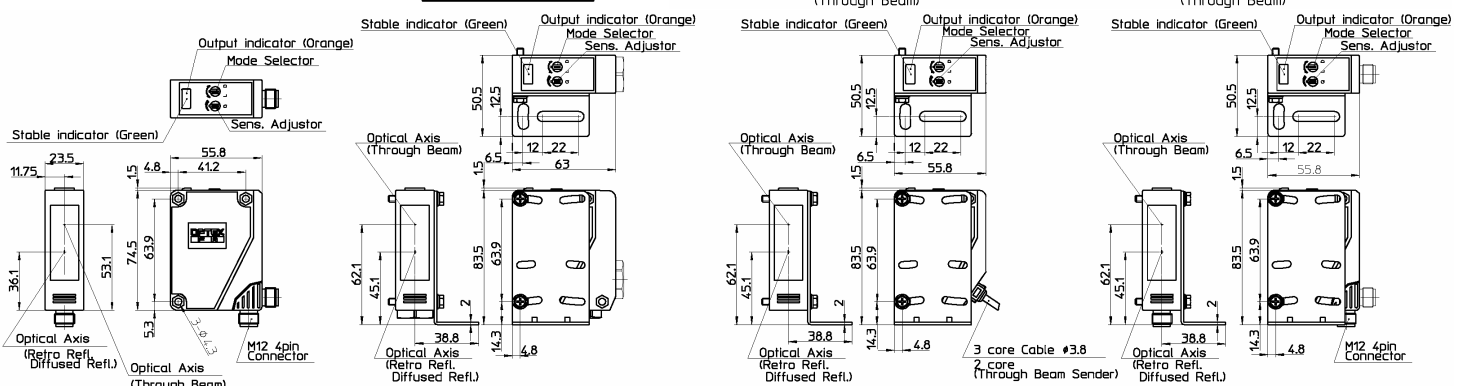

Wall Installation

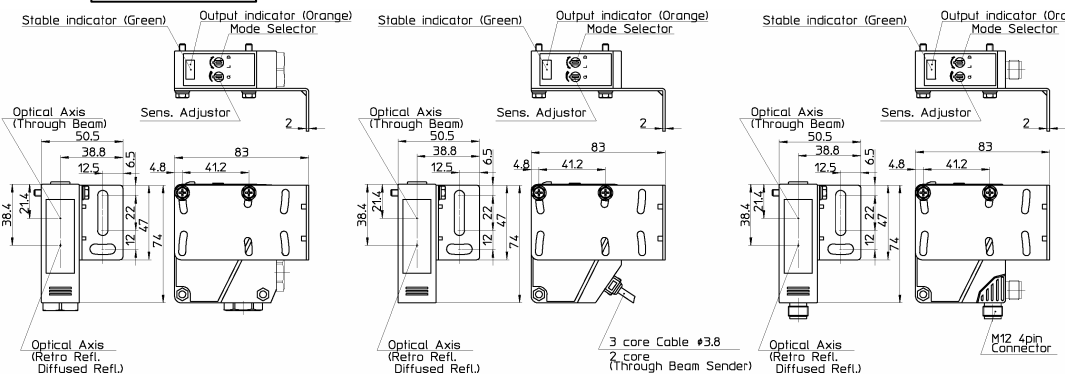

● Specifications and equipment are subject to change without any obligations on the part of manufacture.

● For more information, questions and comments regarding products, please contact us below.

Manufactured and sold by :

OPTEX FA OPTEX FA CO.,LTD.

600-8815 Kyoto, Shimogyo, Awata Chudoji 93, Japan
TEL. +81-(0)75-325-2920
FAX. +81-(0)75-325-2921

Website : <http://www.optex-fa.com>



Photoelectric Sensor

V3, V4 SERIES

AC/DC Type

√V4T/V3T-7000

√V4R/V3R-1200

√V4D/V3D-200

INSTRUCTION MANUAL

- Confirm if the item meets your needs.
- Before the use, you should first thoroughly read this manual and operate correctly as mentioned.
- You should keep this manual at hand for proper use.

SPECIFICATIONS

Item	Connection Type	AC/DC type					
		Through Beam		Retro Reflection		Diffused Reflection	
		Terminal Chamber	Cable	Terminal Chamber	Cable	Terminal Chamber	Cable
Supply Voltage		V4T-7000	V3T-7000	V4R-1200	V3R-1200	V4D-200	V3D-200
Current Consumption		DC24~240V ±10% AC24~240V±10% 50/60Hz					
Light Source		3VA max.(Class A),4VA max.(Class B) 2VA max.(Class A),2.5VA max.(Class B)					
Detecting Distance		70m				12m / Reflector V-61	
Hysteresis		-				20% max	
Sensitivity Adjustment		One turn volume					
Response Time		20ms					
Indicator		Output indicator (orange LED) / Stable indicator (green LED)					
Operating Mode		Light ON					
Control Output		Relay Output 1Form C AC240V / DC30V,3A max (Resistive)					
Relay Lifetime		Mechanical : 5X10 ⁷ / Electrical : 10 ⁷					
Environmental Illuminance	Sun Light	10,000lx					
	Incandescent Light	3,000lx					
Ambient Temperature		-25~55°C					
Ambient Humidity		35~85%/RH					
Storage Temp./Humidity		-40~70°C/35~95% RH					
Insulation Resistance		Min.20MΩ /DC500V					
Withstand Voltage		AC2,700V 50/60Hz 1minute					
Vibration Resistance		10~55Hz amplitude1.5mm X, Y, Z each 2h					
Shock Resistance		500m/s ² X, Y, Z each 3times					
Protection Category		IEC 144 IP67					


OTHER PRECAUTIONS

- Be careful not to install the sensor at the following locations, as it may otherwise malfunction.
 - Where a lot of dust, vapor, or the like is present.
 - Where corrosive gas is produced.
 - Where water, oil or the like files directly onto the sensor.
 - Where strong vibration or shock is caused to the sensor.
- Do not use organic solvent, such as thinner, to remove contaminants from the body case, lid, and lens which are all of plastics. Using a dry rag, just wipe clean.
- When a switching regulator is to be used with a power supply, be sure to ground the Frame Ground Terminal.
- Do not use the sensor in a transient state at power on. (about 100ms)
- Do not run sensor cable near a high-voltage lines, or power lines or put them together in the same raceway. This warning should be strictly observed to prevent malfunctions caused by inductive interference.


⚠ Must not use this item as safety equipment for the purpose of human body protection.

HOW TO USE

AC/DC model Terminal Chamber type

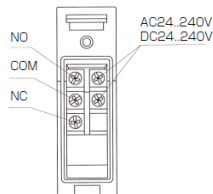


AC/DC model Cable type

 


Connection

- Install the cables to match the connection terminal No. as shown below.
- Use either lead-in opening A or B according to the installation method involved.
- Install a cover (bolt) at the lead-in opening not to be used.
- The figure below shows how the cables are installed when lead-in opening A is used.
- ※ 1 Cable packing is selected separately either for cable or cover (bolt) according to cable diameter. Large 4 - 6 Small: 6 - 8

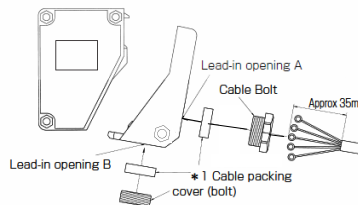

 
○ Dimensions of applicable solderless terminals




- Use solderless terminals with insulating tube.
- Use 4 to 8 mm diameter cables circular in section to maintain watertightness.
- Wrong wiring may be a cause of burned or damaged sensor. Pay due attention to wiring.
- Be careful not to install the cable near power lines, for otherwise the sensor may malfunction.
- Using the mounting accessories supplied, the sensor can be installed on either floor or wall.

INPUT AND OUTPUT CIRCUIT DIAGRAMS

AC/DC type

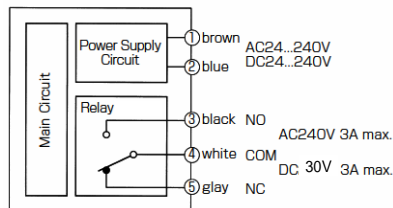

DIMENSIONS (Unit: mm)

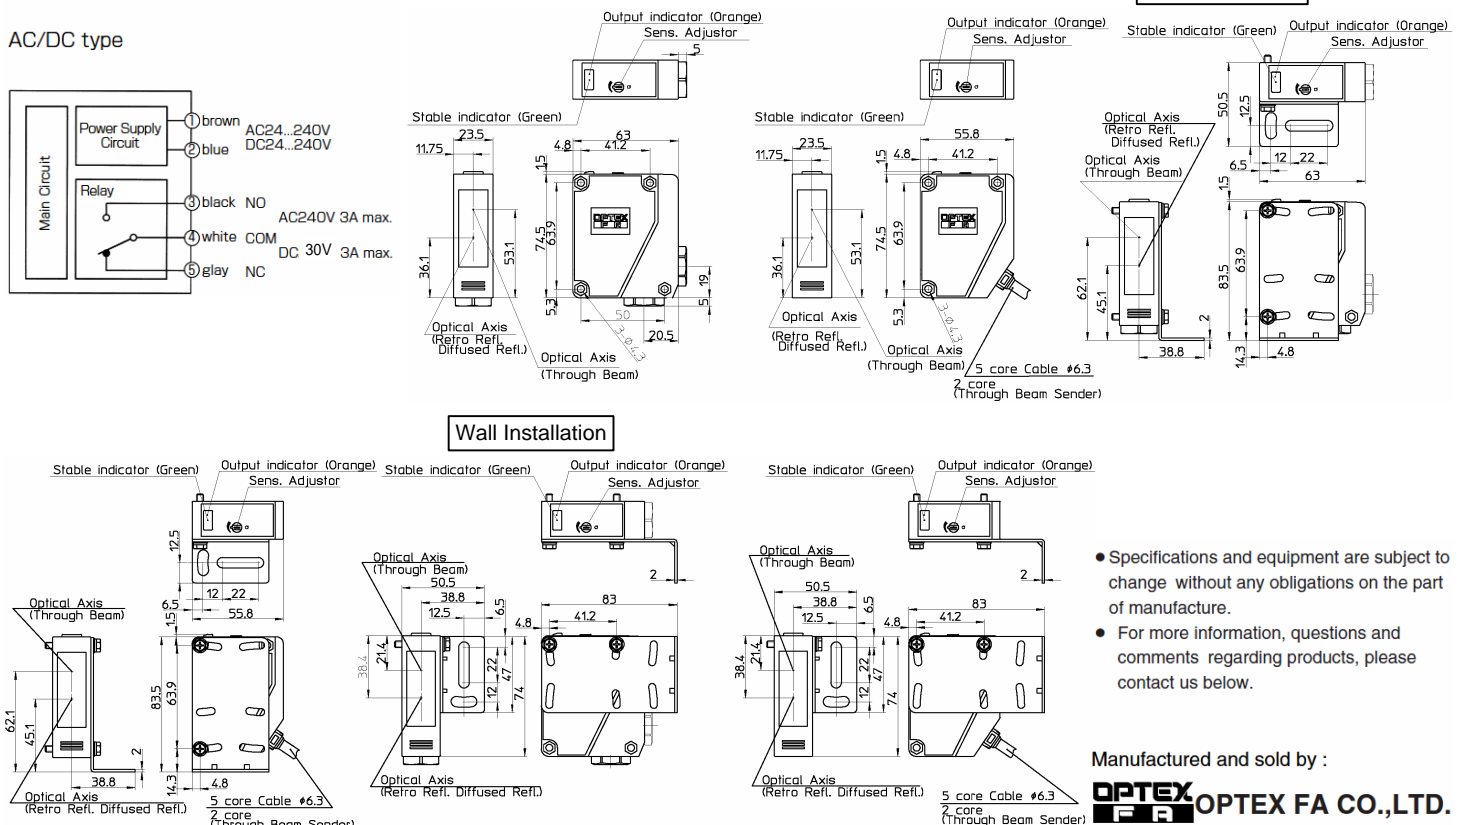

- Specifications and equipment are subject to change without any obligations on the part of manufacture.
- For more information, questions and comments regarding products, please contact us below.

Manufactured and sold by :

OPTEX FA CO.,LTD.

600-8815 Kyoto, Shimogyo, Awata Chudoji 93, Japan
TEL. +81-(0)75-325-2920
FAX. +81-(0)75-325-2921

Website : <http://www.optex-fa.com>